


SYMBOL	EXPLANATION
	Auxiliary Menu
	Auxiliary 1
	Auxiliary 2
	Clutch Disengaged
	Clutch Engaged
	Dual Auxiliary (Dual Aux)
	Home Menu
	Power
	Advanced Wireless Remote Control Battery Charge
	Vehicle Battery Charge
	Winching Menu
	Winch Motor Temperature
	Winching In
	Winching out
	Wireless Signal Strength

SETTINGS

Select

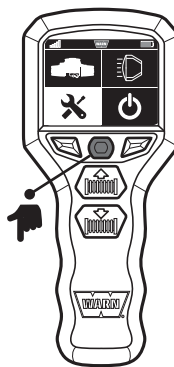

See your operator's manual for complete Settings Instructions




Always take time to fully understand your remote, winch and the winching operation by reviewing the Basic Guide to Winching Techniques and your Operator's Manual included with your winch.

For further information or any questions contact:



WARN INDUSTRIES, INC.
 12900 S.E. Capps Road, Clackamas
 OR USA 97015-8903, 1-503-722-1200,
 Customer Service: 1-800-543-9276
 Dealer Locator Service: 1-800-910-1122
 or visit www.warn.com.

ZEON® Platinum

Advanced Wireless Remote Quick Start Guide

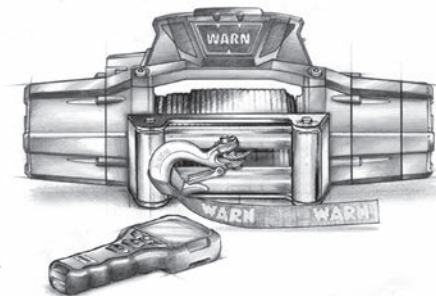



The Basics

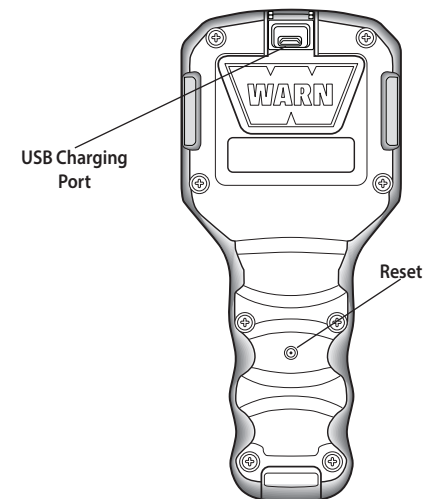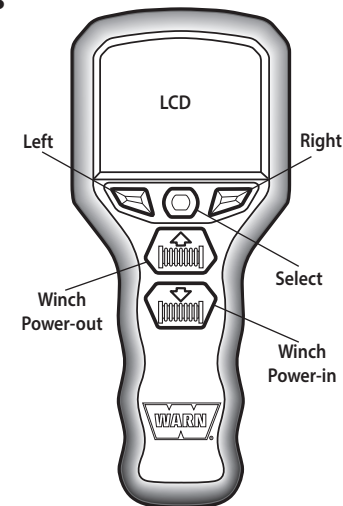

POWER



Remote Power ON

Remote Power OFF

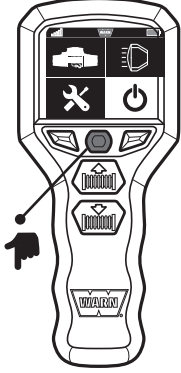
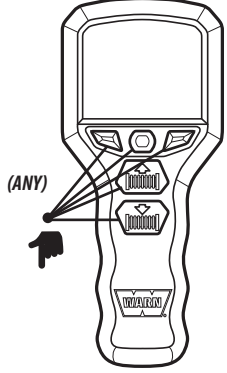


Winch Power ON

Winch Power OFF

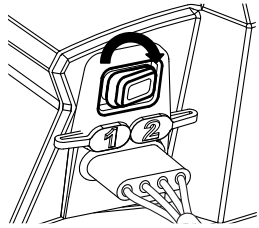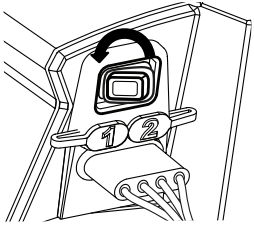


Navigation

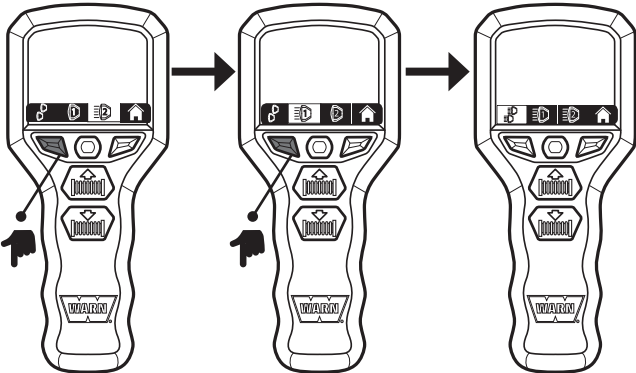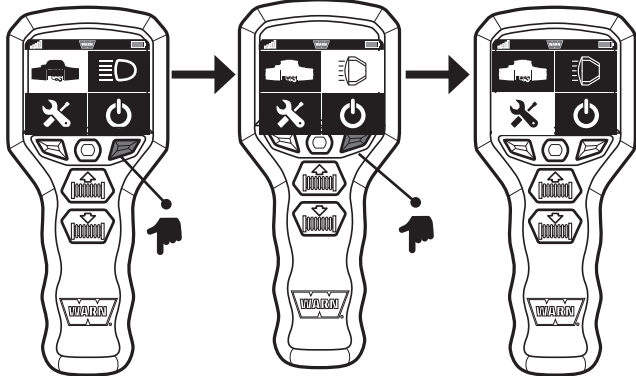

WINCHING

Select

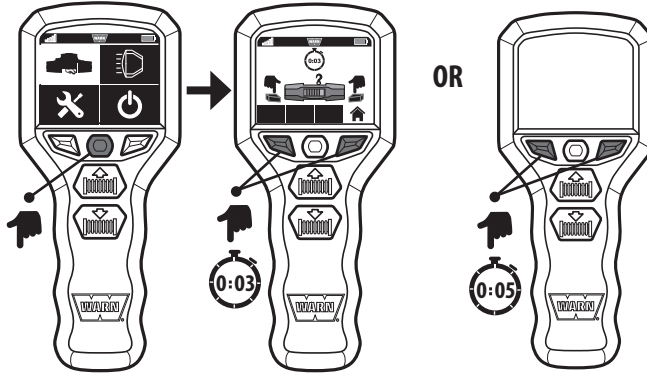


OR

Winch Direction

POWER-IN



POWER-OUT

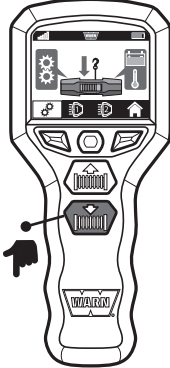

Clutch

DISENGAGE


ENGAGE

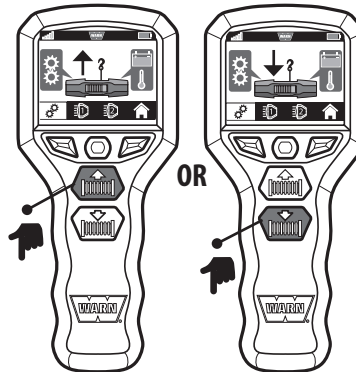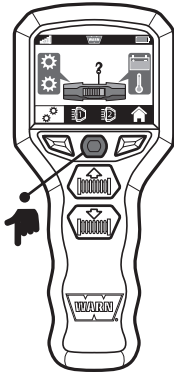

OR


AUXILIARY

Select

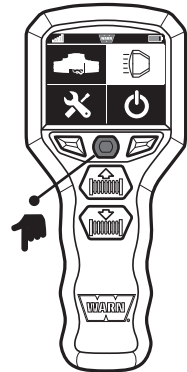


Options

DUAL

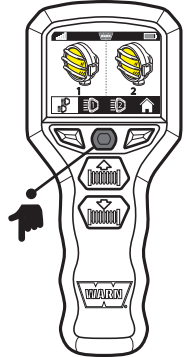

AUX 1

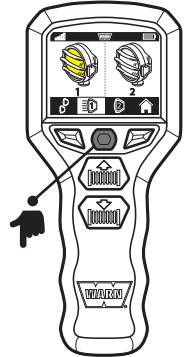

AUX 2

